

C4 Sub Mk2 – Packaging, Weights & Dimensions

Packed weight: 64kg / 140.8lbs

Crate dimensions (HxWxD): 82 x 73 x 63cm / 32 1/4" x 28 3/4" x 24 3/4"

Notes:

- Two people are needed to unpack the C4 Sub Mk2.
- The front panel is secured with clips (not screws) – see Figure. 2.
- To access the product, remove the front panel of the crate - see Figure. 3.
- Carefully remove crate clips with a claw hammer or a large flat bladed screwdriver.
- Subwoofers are packed in EPE foam top/bottom caps - see Figure. 3/4/5.
- To unpack, slide the subwoofer - complete with both foam caps - out of the crate - see Figure. 4.
- Mains lead, spikes and mains lead can be found in cut-outs in the upper foam cap.



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5